Comprehensive Protection Plan

ENJOY THE LUXURY OF PEACE OF MIND.

ONLY FROM ACURA



















Plus

This brochure is intended as a general overview. It is intended to provide an outline of the mechanical and electrical parts and components of the plans. Images used in this brochure are for graphic representation only. Acura, a division of Honda Canada Inc., reserves the right to make changes at any time without notice or obligation. Please refer to the contract for full details of coverage, limitations, exclusions and mutual responsibilities. Visit your Acura dealer for complete and up-to-date details regarding your coverage.



10/19





acura.ca

ACURA Plus



NS2542

131056 Acura_Comp_E [NS2542].indd 1 2019-08-19 11:11 AM

WHY ACURA PLUS?

Precision Crafted Performance is at the core of our DNA.

With ground breaking technologies like Sport Hybrid Super Handling All-Wheel Drive™, we continue to set new standards through bold innovation and precision manufacturing.

Driving a luxury vehicle goes beyond exhilarating engineering, that's why we're committed to giving you a worry-free ownership experience.

The Acura Plus suite of Warranty and Protection packages was custom designed to ensure your total peace of mind. Just like our vehicles, our protection products are designed, developed and tested to the highest industry standards.

Right here in Canada.

Customizable plans & à la carte options mean protection precision tailored to you.

The Acura Plus Flexible Term Plan provides extensive coverage for the vast majority of components of your Acura and also include enhanced Roadside Assistance.

No matter where you drive in Canada or the United States, your vehicle will be backed by Acura-approved technicians using only genuine Acura parts.

PREPARE FOR THE UNEXPECTED

Acura Plus Roadside Assistance

Acura Plus Roadside Assistance is designed to protect you anywhere in Canada and the United States. With our 24/7 toll-free emergency help line you can reach us any time. Roadside Assistance coverage is based on years of ownership, not distance travelled. Which means you'll be covered even if you exceed the allotted kilometers. Acura Plus Roadside Assistance covers the registered vehicle and all authorized drivers. Just one of the many ways Acura gives you total peace of mind.

Standard Factory Roadside Coverage is included with your vehicle

- Emergency Roadside Service
- Lockout Service
- Winching Service
- Towing Service
- Emergency Transportation
- Trip Interruption Benefits
- Traffic Accident Services
- Emergency Message Service
- Dealer Location Service
- Car Rental Benefits
- Trip Planning Service

Get out and drive

When you upgrade to an Extended Warranty, your Roadside Assistance is also upgraded to include Tire Road Hazard Service.

Road hazards are a very real part of driving. Acura Plus Roadside Assistance with Tire Road Hazard will cover the cost of installation, balancing and the value of the OEM tire. We'll cover up to four tires / repairs* and get you back on the road again quickly.

PLAN OPTIONS

	ILX	TLX	RDX	MDX RLX
**5 Year / 100,000 km	\$908	\$1,388	\$1,548	\$1,888
**6 Year / 100,000 km	\$1,168	\$1,818	\$2,038	\$2,248
**6 Year / 160,000 km	\$1,558	\$2,578	\$2,788	\$3,068
**7 Year / 130,000 km		\$2,428	\$2,638	\$2,898
**7 Year / 160,000 km	\$1,708	\$2,968	\$3,178	\$3,508
**7 Year / 200,000 km	\$2,098	\$3,328	\$3,868	\$4,198
**8 Year / 200,000 km	\$2,428	\$3,868	\$4,478	\$4,948

131056 Acura_Comp_E [NS2542].indd 2 2019-08-19 11:11 AM

^{*}Based on tire tread depth. Temporary spare not covered.

^{**} Whichever comes first.

⁻ Price quotes are in effect as of October 1, 2019 and are subject to change without notice.

⁻ All prices listed are MSRP.

⁻ Brochure Pricing applies to plans registered within 60 days of the vehicle in-service date.

⁻ Deferred purchases surcharges apply. See dealer for full details

PRICINE WALLIAMY WAL	INCLU		INCLUDED WITH YOUR VEHICLE ACURA PLUS			INCLUDED WITH YOUR VEHICLE		ACURA PLUS
Cylinder heads & all internal parts* figher mounts Flywheel Internal Reparts of the pressure house figher mounts Meduator & secumilation Power unit pump Pressure winth Oil pain (if damaged by the failure of a merel failured of an enterel failured of	ENGINE	WARRANTY 4 YRS /	COMPONENT	PROTECTION	ABS/VSA	WARRANTY 4 YRS /	MAJOR COMPONENT 5 YRS / 100,000 KM	COMPREHENSIVE PROTECTION PLAN
Cylinder heads & all internal parts* figher mounts Flywheel Internal Reparts of the pressure house figher mounts Meduator & secumilation Power unit pump Pressure winth Oil pain (if damaged by the failure of a merel failured of an enterel failured of	Cylinder block & all internal parts*				High pressure hoses			
Engine mounts (Fyshweld Intake & cohaust manifolds Old pam (Franespet by the failure Old person (Franespet by the failure) Old p								
Flywheel This lake & Cohaust manifolds Oil pan (if damaged by the failure of a internal balance for all of the colors of the c								
Intake & Achaust manifolds Oil pany (Famages) the balane of an internal floritoring part) Oil pany (Famages) the balane of an internal floritoring part) Oil pany (Famages) Note train & Note to cover Famages Note train & Valve cover Intamaged by the failure of an internal floritoring Note train & Valve cover Intamaged by the failure of an internal floritoring Note train & Valve cover Intamaged by the failure of an internal floritoring Note train & Valve cover Intamaged by the failure of an internal floritoring Note train & Valve cover Intamaged by the failure of an internal floritoring Note train & Valve cover Intamaged by the failure of an internal floritoring Note train & Valve cover Intamaged by the failure of a large with part Note train & Valve cover Intamaged by the failure of a large with part Note train & Valve cover Intamaged by the failure of a large with part Note train & Valve cover Intamaged by the failure of a large with part Note train & Valve Note Note train & Valve Note train & Valve Note train & Valve Note No								
Dil pati (if damaged by the failure of a internal bathcied part) Dil pump								
Dil pump Tunchchager & intercololer Timing belt / chain, balancer belt & tensioner Iming belt / chain, balancer belt in the second professioner in the	Oil pan (if damaged by the failure of an internal lubricated part)							
Turbocharger & intercooler (Turbocharger & intercooler (Transpieth of Aris), balancer betil & tensioner (Transpieth of Aris), balancer	Oil pump				Pagetar 9, shask valva			
Iming Belf / Ahan, pålancer belf & tensorier (without the parties of the parties	Turbocharger & intercooler							
(maintenance required as per Owner's manual) Valve train & valve cover (if damaged by the failure of an informatic fundation of the failure of an informatic fundation of the failure of an informatic fundation of the failure of the	Timing belt / chain, balancer belt & tensioner							
Parking brake linkage & cables Proportioning valves Rotors Alternator Ingine wring harness Ingine wring harness Ingine or oil Oil pressure sender unit Starter Voltage regulator NOINE - Cooling Cooling fan Cooling fan thermoswitch Cooling fan th	(maintenance required as per Owner's manual)							
ENGINE – Electric Alternator Engine wring hamess Ignition coil Oil pressure sender unit Storter Storter Scoling far from Storter Scoling far from Storter Cooling far from	Valve train & valve cover (if damaged by the failure							
Alternator Engine wring harness [gription coil	of an internal lubricated part)							
Alternator Engine wring harmess gliption coil Dil pressure sender unit Starter Voltage regulator ENGINE - Cooling COoling fan Cooling fan Cooling fan Cooling fan Cooling fan thermoswitch Cooling	FNGINE - Flectric							
Engine wring harness [guition coil]					Rotors			
Ignition coil Oil pressure sender unit Starter Voltage regulator Voltage regulator Voltage regulator Cooling S Cooling fan Cooling fan Cooling fan Hermoswitch Cooling fan thermoswitch Cooling fa					CUITCH			
Oil pressure sender unit Starter Voltage regulator ENGINE - Cooling Cooling fan Cooling fan Cooling fan Cooling fan Cooling fan Cooling fan thermoswitch Cooling fan timer Radiator Radiator Radiator (Cap Cooling fan Coolin								
Starter Voltage regulator Voltage regulator Voltage regulator Cooling Cooling fan Cooling fan Cooling fan Hermoswitch Cooling fan thermoswitch Cooling fan thermoswitch Cooling fan thermoswitch Radiator Radiator (A deprive cruise control unit Check valve Collision mitigation system Radiator (A deprive cruise control unit Check valve Collision mitigation system Radiator (A deprive cruise control unit Check valve Collision mitigation system Radiator (A deprive cruise control unit Check valve Collision mitigation system Radiator (A deprive cruise control module Corporative cruis sold in the cruise cruise cruise cruise control solenoid Paddie shifters Pressure control solenoid Radiator (A cruise c								
Voltage regulator ENGINE - Cooling Cooling fan Cooling fan Cooling fan Cooling fan thermoswitch Cooling fan thermoswitch Cooling fan timer Radiator Cap Radiator Cap Radiator Cap Thermostat, vacuum & coolant hoses Water pump ENGINE - Emissions Barometric pressure sensor Catalytic converter Crank angle sensor Crank	•							
ENGINE - Cooling Cooling fan thermoswitch Radiator Radiator Radiator Radiator (Ack valve) Radiator								
Cooling fan Cooling fan themoswitch Cooling fan timer Radiator Radiator Radiator (Collision mitigation system (Collision mitigation	Voltage regulator				Slave cylinder			
Cooling fan thermoswitch Cooling fan timer Radiator Radiator (Collission mitigation system Ration mitigation system Ration mitigation system Radiator (Collission mitigation system Ration mitigation system Radiator (Collission mitigation system Ration m	ENGINE - Cooling				CRUISE CONTROL AND ACC			
Cooling fan timer Radiator Radiator (a) Module Thermostat housing & gasket Thermostat, vacuum & coolant hoses Water pump ENGINE - Emissions Barometric pressure sensor Catalytic converter Crank angle sensor Crank shaft speed sensor Clankshaft speed sensor Clankshaft speed sensor Celletric load detector Engine control module Exhaust Gas Recirculation (EGR) system Exhaust Gas Recirculation (EGR) system Fast idle thermo valve Fuel tank pressure sensor Idle air control valve Injector resistors Injectors Injectors Intake air temperature sensor Automatic transmission cooler Control module CV joints CV boots & bands Differential case & all internal parts Crank shafts External shift linkage(s) External shift lever for manual transmission Engine control module Exhaust Gas Recirculation (EGR) system Pressure control solenoid Pressure switch Fuel tank pressure sensor Idle air control valve Injectors Injectors Injectors Intake air temperature sensor Ange sensor Oxygen sensor	Cooling fan				Actuator & valve			
Cooling fan timer Radiator (Collision mitigation system (Collision (Coll	Cooling fan thermoswitch				Adaptive cruise control unit			
Radiator cap Thermostat housing & gasket Thermostat, vacuum & coolant hoses Water pump ENGINE - Emissions Barometric pressure sensor Catalytic converter Crank angle sensor Crank shaft speed sensor EI main relay Electric load detector Engine control module Exparorative emission two-way valve Exparorative emission (EGR) system Fast idle thermo valve Epid tank pressure sensor Idle air control valve Injector resistors Injectors Injectors Injectors Injectors Intake air temperature sensor Interest air sensor Intake air temperature sensor Interest air sensor Injector sensor Intake air temperature sensor Intake air	Cooling fan timer							
Radiator cap Thermostat housing & gasket Thermostat, vacuum & coolant hoses Water pump ENGINE - Emissions Barometric pressure sensor Catalytic converter Crank angle sensor Crankshaft speed sensor Ell main relay Electric load detector Engine control module Expaorative emission two-way valve Expaorative emission two-way valve Expaorative emission two-way valve Expatel tank pressure sensor Gidle air control valve Injector resistors Injector resistors Injector sensor Another Star Radia Start Sta	Radiator				Collision mitigation system			
TRANSAXLE / TRANSMISSION Water pump ENGINE - Emissions Barometric pressure sensor Catalytic converter Crank angle sensor Crankshaft speed sensor Fill main relay Electric load detector Expanded we mission two-way valve Expanded to there was ension to Cort of the sensor Expanded to the pressure sensor Expanded to the pressure sensor Expanded to the pressure sensor BYRS/130,000 KM Differential case & all internal parts Drive shafts External shift linkage(s) Fill main relay Fill main r	Radiator cap							
Automatic transmission cooler Control module CV joints Barometric pressure sensor Catalytic converter Crank angle sensor Crank angle sensor Crankshaft speed sensor Ell main relay Electric load detector Engine control module Evaporative emission two-way valve Exhaust Gas Recirculation (EGR) system Fuel tank pressure sensor Idle air control valve Injector resistors Injectors Injectors Injectors Map sensor Map sensor Oxygen sensor Saves/130,000 KM Automatic transmission cooler Control module CV joints CV boots & bands Differential case & all internal parts External Shift internal parts Cearshift lever for manual transmission Lock-up control solenoid Exportive emission two-way valve Paddle shifters Pressure control solenoid Fressure sensor Pressure control solenoid Shift control solenoid Speed pulser Inorque converter on automatic transmission Infanction assembly & all internal Inbricated parts* Transmission mounts Yaw-rate sensor Vaw-rate sensor Vaw-rate sensor	Thermostat housing & gasket							
ENGINE - Emissions Barometric pressure sensor Catalytic converter Crank angle sensor Crankshaft speed sensor Ell main relay Electric load detector Engine control module Evaporative emission two-way valve Evahaust Gas Recirculation (EGR) system Fast idle thermo valve Fuel tank pressure sensor Glidle air control valve Injector resistors Injectors Intake air temperature sensor Knock sensor Syst / 30,000 KM Control module C / 1 joints C / 2 boots & bands Differential case & all internal parts Drive shafts External shift linkage(s) External shift linkage(s) Final drive housing & all internal parts Gearshift lever for manual transmission Lock-up control solenoid Paddle shifters Extension (EGR) system Fressure control solenoid Fressure switch Shift control solenoid Speed pulser Torque converter on automatic transmission Injectors Injectors Injectors Intake air temperature sensor Map sensor Oxygen sensor Oxygen sensor Spark detection module Throttle body	Thermostat, vacuum & coolant hoses				TRANSAXLE / TRANSMISSION			
ENGINE - Emissions Barometric pressure sensor Catalytic converter 8Y85/130,000 KM Circl module CV joints CV boots & bands Differential case & all internal parts Drive shafts External shift linkage(s) EFI main relay Electric load detector Engine control module Evaporative emission two-way valve Exhaust Cas Recirculation (ECR) system Fast idle thermo valve Fuel tank pressure sensor Idle air control valve Injector resistors Injectors Injectors Intake air temperature sensor Map sensor Oxygen sensor Spark detection module EThrottle body Control module CV joints CV boots & bands Differential case & all internal parts Drive shafts External shift linkage(s) EFI din view housing & all internal parts External shift linkage(s) EFI din view housing & all internal parts External shift linkage(s) EFI din view housing & all internal parts External shift linkage(s) EFI din view housing & all internal parts External shift linkage(s) EFI din view housing & all internal parts External shift linkage(s) EFI din view housing & all internal parts External shift linkage(s) EFI din view housing & all internal parts External shift linkage(s) EFI din view housing & all internal parts External shift linkage(s) EFI din view housing & all internal parts External shift linkage(s) EFI din view housing & all internal parts Internal view housing & all internal parts Yaw-rate sensor	Water pump				Automatic transmission cooler			
ENCINE - Emissions Barometric pressure sensor Catalytic converter BYRS/130,000 KM Crankshaft speed sensor Crankshaft speed sensor Electric load detector Engine control module Evaporative emission two-way valve Exhaust Gas Recirculation (EGR) system Fast idle thermo valve Fuel tank pressure sensor Idle air control valve Injector resistors Injectors Injectors Interval emission assembly & all internal Intrake air temperature sensor Knock sensor Map sensor Oxygen sensor Syrs/130,000 KM CV joints CV boots & bands Converted all internal parts CV boots & bands CV boots & bands Carkeria parts Converted on automatic transmission Converted on automatic tran	•		_					
Barometric pressure sensor Catalytic converter SYRS/130,000 KM Differential case & all internal parts Drive shafts External shift linkage(s) EIT main relay Electric load detector Engine control module Evaporative emission two-way valve Exhaust Gas Recirculation (EGR) system Fast idle thermo valve Injector resistors Injectors Injectors Intake air temperature sensor Knock sensor Map sensor Oxygen sensor Oxygen sensor Oxygen sensor Oxade sensor SYRS/130,000 KM Differential case & all internal parts External shift linkage(s) External	ENGINE – Emissions							
Catalytic converter Crank angle sensor Crankshaft speed sensor Electric load detector Engine control module Evaporative emission two-way valve Exhaust Gas Recirculation (EGR) system Fuel tank pressure sensor Idle air control valve Injector resistors Injectors Intake air temperature sensor Knock sensor Map sensor Oxygen sensor Oxygen sensor Oxands All internal parts Differential case & all internal parts External shift linkage(s)	Barometric pressure sensor							
Crank angle sensor Crankshaft speed sensor EFI main relay Electric load detector Engine control module Evaporative emission two-way valve Exhaust Gas Recirculation (EGR) system Fast idle thermo valve Fuel tank pressure sensor Idle air control valve Injector resistors Intake air temperature sensor Knock sensor Map sensor Oxygen sensor Oxygen sensor Oxygen sensor Oxygen sensor Shert can be sensor Shert can be sensor Speak detection module External shift linkage(s) External shift link			8 YRS/130,000 KM					
External shift linkage(s) EFI main relay Electric load detector Engine control module Evaporative emission two-way valve Exhaust Gas Recirculation (EGR) system Fast idle thermo valve Fuel tank pressure sensor Idle air control valve Injector resistors Injectors Inspectors Inspector sensor Oxygen sensor Oxygen sensor Oxygen sensor Spark detection module Throttle body External shift linkage(s) Final drive housing & all internal parts Gearshift lever for manual transmission External shift linkage(s) Final drive housing & all internal parts Gearshift lever for manual transmission Lock-up control solenoid Paddle shifters Pressure control solenoid Pressure switch Shift control solenoid Speed pulser Torque converter on automatic transmission Transmission assembly & all internal lubricated parts* Transmission mounts Yaw-rate sensor Oxygen sensor Spark detection module Throttle body	Crank angle sensor							
EFI main relay Electric load detector Engine control module Evaporative emission two-way valve Exhaust Gas Recirculation (EGR) system Fast idle thermo valve Fuel tank pressure sensor Idle air control valve Injector resistors Injectors Intake air temperature sensor Map sensor Oxygen sensor Spark detection module Throttle body Final drive housing & all internal parts Gearshift lever for manual transmission Lock-up control solenoid Paddle shifters Pressure control solenoid Pressure switch Shift control solenoid Speed pulser Torque converter on automatic transmission Transmission assembly & all internal lubricated parts* Transmission mounts Yaw-rate sensor								
Electric load detector Engine control module Evaporative emission two-way valve Exhaust Gas Recirculation (EGR) system Fast idle thermo valve Fuel tank pressure sensor Idle air control valve Injector resistors Injectors Intake air temperature sensor Knock sensor Map sensor Oxygen sensor Spark detection module Throttle body System Fast idle term or manual transmission Lock-up control solenoid Paddle shifters Pressure control solenoid Pressure switch Shift control solenoid Speed pulser Torque converter on automatic transmission Transmission assembly & all internal lubricated parts* Transmission mounts Yaw-rate sensor					0 17			
Engine control module Evaporative emission two-way valve Exhaust Gas Recirculation (EGR) system Fast idle thermo valve Fuel tank pressure sensor Idle air control valve Injector resistors Injectors Intake air temperature sensor Knock sensor Oxygen sensor Oxygen sensor Spark detection module EYRS/130,000 KM Paddle shifters Pressure control solenoid Pressure switch Shift control solenoid Speed pulser Forque converter on automatic transmission Transmission assembly & all internal Iubricated parts* Transmission mounts Yaw-rate sensor Fans responser Spark detection module Throttle body								
Evaporative emission two-way valve Exhaust Gas Recirculation (EGR) system Fast idle thermo valve Fuel tank pressure sensor Idle air control valve Injector resistors Injectors Intake air temperature sensor Map sensor Oxygen sensor Spark detection module Throttle body Paddle shifters Pressure control solenoid Pressure switch Shift control solenoid Speed pulser Torque converter on automatic transmission Transmission assembly & all internal Iubricated parts* Transmission mounts Yaw-rate sensor			8 YRS / 130.000 KM					
Exhaust Gas Recirculation (EGR) system Fast idle thermo valve Fuel tank pressure sensor Idle air control valve Injector resistors Injectors Intake air temperature sensor Knock sensor Map sensor Oxygen sensor Spark detection module Throttle body Pressure control solenoid Pressure switch Shift control solenoid Speed pulser Torque converter on automatic transmission Transmission assembly & all internal Iubricated parts* Transmission mounts Yaw-rate sensor Yaw-rate sensor								
Fast idle thermo valve Fuel tank pressure sensor Idle air control valve Injector resistors Injectors Injectors Instake air temperature sensor Intake air temperature sensor Map sensor Oxygen sensor Spark detection module Throttle body Pressure switch Shift control solenoid Speed pulser Torque converter on automatic transmission Transmission assembly & all internal Iubricated parts* Transmission mounts Yaw-rate sensor Yaw-rate sensor								
Fuel tank pressure sensor Idle air control valve Injector resistors Injectors Injectors Intake air temperature sensor Intake air temperature sensor Index sensor Injectors Intake sensor Interval interva								
Idle air control valve Injector resistors Injectors Injectors Intake air temperature sensor Knock sensor Oxygen sensor Oxygen sensor Spark detection module Throttle body								
Injector resistors Injectors Injectors Injectors Intake air temperature sensor Knock sensor Knock sensor Oxygen sensor Oxygen sensor Spark detection module Throttle body								
Injectors Intake air temperature sensor Iransmission mounts Yaw-rate sensor Oxygen sensor Spark detection module Throttle body								
Intake air temperature sensor Knock sensor Map sensor Oxygen sensor Spark detection module Throttle body	,							
Knock sensor Map sensor Oxygen sensor Spark detection module Throttle body	,							
Map sensor Oxygen sensor Spark detection module Throttle body								
Oxygen sensor Spark detection module Throttle body								
Spark detection module Throttle body					iaw-iate selisoi			
Throttle body								
· · · · · · · · · · · · · · · · · · ·								

Compensator arms & trailing arms		
Control arms		
Front & rear beams		
Knuckles		
Radius rods & bushings		
Rear hub & bearings		
Shafts & bushings		
Shocks, struts & dampers		
Stabilizer bar		
Stabilizer bushings & links		
Strut mounts & bearings		
Wheel bearings		
STEERING		
EPS motor		
Output & return hoses		
Power steering pump / motor		
Steering column		
Steering gear housing & all internal parts		
Steering rack assembly		
Steering shaft		
Steering shaft gearbox connector		
Tie rods & tie rod ends		
& all internal parts CV joints		
CV boots & bands		
Rear differential assembly*		
Rear differential mounts		
FUEL – System		
Complete exhaust system		
Fuel filler neck & cap		
Fuel pressure regulator		
Fuel pump		
ruel bullib		
Fuel sending unit Fuel tank		
Fuel sending unit		
Fuel sending unit Fuel tank		
Fuel sending unit Fuel tank Metal fuel lines SUPPLEMENTAL RESTRAINT		
Fuel sending unit Fuel tank Metal fuel lines SUPPLEMENTAL RESTRAINT SYSTEM (SRS)		
Fuel sending unit Fuel tank Metal fuel lines SUPPLEMENTAL RESTRAINT SYSTEM (SRS) Airbags (SRS)		
Fuel sending unit Fuel tank Metal fuel lines SUPPLEMENTAL RESTRAINT SYSTEM (SRS) Airbags (SRS) Airbag module		
Fuel sending unit Fuel tank Metal fuel lines SUPPLEMENTAL RESTRAINT SYSTEM (SRS) Airbags (SRS) Airbag module All SRS sensors		

INCLUDED WITH YOUR VEHICLE

MAJOR COMPONENT 5 YRS / 100,000 KM

FACTORY WARRANTY 4 YRS / 80,000 KM

Ball joints
Coil spring

Compensator arms & trailing arms

ACURA PLUS

COMPREHENSIVE PROTECTION PLAN

131056 Acura_Comp_E [NS2542].indd 3 2019-08-19 11:11 AM

^{*} Customer maintenance required as per Maintenance Minder

AIR CONDITIONING Accumulator Accumulator Air mix control motor & cable Blower & function switch Blower motor & resistor Compressor / Clutch assembly & seal Condenser assembly & receiver assembly Condenser fan Evaporator Expansion valve Field coil Function control motor Idler pulley Pipes & hoses Recirculation control motor Thermal protector Thermostatic switch Wire harness, diodes Water valve cable Wire harness, diodes DOOR & BODY Antenna mast or XM antenna mast Door latch Door lock cylinders External trim, body seals, wheel rims & study, glass, paint, interior trim, upholstery & seat construction. Surface corrosion of body panels (unlimited distance) Hinges Mechanical moonroof components Power door lock actuator Release / control cables for seats, trunk or hatch release, hood & fuel filler door Seat belt chime Seat heater		INCLUDED WITH	H YOUR VEHICLE	ACURA PLUS
Air mix control motor & cable Blower & function switch Blower motor & resistor Compressor / Clutch assembly & seal Condenser assembly & receiver assembly Condenser fan Evaporator Expansion valve Field coil Function control motor Idler pulley Pipes & hoses Recirculation control motor Thermal protector Thermostatic switch Wire harness, diodes HEATING Heater control Heater core Pipes & hoses Water valve cable Wire harness, diodes DOOR & BODY Antenna mast or XM antenna mast Door latch Door lock cylinders External trim, body seals, wheel rims & studs, glass, paint, interior trim, upholstery & seat construction. Surface corrosion of body panels (unlimited distance) Hinges Mechanical moonroof components Power door lock actuator Release / control cables for seats, trunk or hatch release, hood & fuel filler door Seat belt chime	AIR CONDITIONING	WARRANTY 4 YRS /	5 YRS /	COMPREHENSIVE PROTECTION PLAN
Blower & function switch Blower motor & resistor Compressor / Clutch assembly & seal Condenser assembly & receiver assembly Condenser fan Evaporator Expansion valve Field coil Function control motor Idler pulley Pipes & hoses Recirculation control motor Thermal protector Thermal protector Thermostatic switch Wire harness, diodes HEATING Heater corre Pipes & hoses Water valve cable Wire harness, diodes DOOR & BODY Antenna mast or XM antenna mast Door latch Door lock cylinders External trim, body seals, wheel rims & studs, glass, paint, interior trim, upholstery & seat construction. Surface corrosion of body panels (unlimited distance) Hinges Mechanical moonroof components Power door lock actuator Release / control cables for seats, trunk or hatch release, hood & fuel filler door Seat belt chime	Accumulator			
Blower motor & resistor Compressor / Clutch assembly & seal Condenser assembly & receiver assembly Condenser fan Evaporator Expansion valve Field coil Function control motor Idler pulley Pipes & hoses Recirculation control motor Thermal protector Thermal protector Thermostatic switch Wire harness, diodes HEATING Heater control Heater core Pipes & hoses Water valve cable Wire harness, diodes DOOR & BODY Antenna mast or XM antenna mast Door latch Door lock cylinders External trim, body seals, wheel rims & studs, glass, paint, interior trim, upholstery & seat construction. Surface corrosion of body panels (unlimited distance) Hinges Mechanical moonroof components Power door lock actuator Release / control cables for seats, trunk or hatch release, hood & fuel filler door Seat belt chime	Air mix control motor & cable			
Compressor / Clutch assembly & seal Condenser assembly & receiver assembly Condenser fan Evaporator Expansion valve Field coil Function control motor Idler pulley Pipes & hoses Recirculation control motor Thermal protector Thermal protector Thermostatic switch Wire harness, diodes HEATING Heater cortrol Heater core Pipes & hoses Water valve cable Wire harness, diodes DOOR & BODY Antenna mast or XM antenna mast Door latch Door lock cylinders External trim, body seals, wheel rims & studs, glass, paint, interior trim, upholstery & seat construction. Surface corrosion of body panels (unlimited distance) Hinges Mechanical moonroof components Power door lock actuator Release / control cables for seats, trunk or hatch release, hood & fuel filler door Seat belt chime	Blower & function switch			
Condenser assembly & receiver assembly Condenser fan Evaporator Expansion valve Field coil Function control motor Idler pulley Pipes & hoses Recirculation control motor Thermal protector Thermostatic switch Wire harness, diodes HEATING Heater control Heater core Pipes & hoses Water valve cable Wire harness, diodes DOOR & BODY Antenna mast or XM antenna mast Door latch Door lock cylinders External trim, body seals, wheel rims & study, glass, paint, interior trim, upholstery & seat construction. Surface corrosion of body panels (unlimited distance) Hinges Mechanical moonroof components Power door lock actuator Release / control cables for seats, trunk or hatch release, hood & fuel filler door Seat belt chime	Blower motor & resistor			
Condenser assembly & receiver assembly Condenser fan Evaporator Expansion valve Field coil Function control motor Idler pulley Pipes & hoses Recirculation control motor Thermal protector Thermostatic switch Wire harness, diodes HEATING Heater control Heater core Pipes & hoses Water valve cable Wire harness, diodes DOOR & BODY Antenna mast or XM antenna mast Door latch Door lock cylinders External trim, body seals, wheel rims & studs, glass, paint, interior trim, upholstery & seat construction. Surface corrosion of body panels (unlimited distance) Hinges Mechanical moonroof components Power door lock actuator Release / control cables for seats, trunk or hatch release, hood & fuel filler door Seat belt chime	Compressor / Clutch assembly & seal			
Condenser fan Evaporator Expansion valve Field coil Function control motor Idler pulley Pipes & hoses Recirculation control motor Thermal protector Thermostatic switch Wire harness, diodes HEATING Heater control Heater core Pipes & hoses Water valve cable Wire harness, diodes DOOR & BODY Antenna mast or XM antenna mast Door latch Door lock cylinders External trim, body seals, wheel rims & studs, glass, paint, interior trim, upholstery & seat construction. Surface corrosion of body panels (unlimited distance) Hinges Mechanical moonroof components Power door lock actuator Release / control cables for seats, trunk or hatch release, hood & fuel filler door Seat belt chime				
Evaporator Expansion valve Field coil Function control motor Idler pulley Pipes & hoses Recirculation control motor Thermal protector Thermostatic switch Wire harness, diodes HEATING Heater control Heater core Pipes & hoses Water valve cable Wire harness, diodes DOOR & BODY Antenna mast or XM antenna mast Door latch Door lock cylinders External trim, body seals, wheel rims & studs, glass, paint, interior trim, upholstery & seat construction. Surface corrosion of body panels (unlimited distance) Hinges Mechanical moonroof components Power door lock actuator Release / control cables for seats, trunk or hatch release, hood & fuel filler door Seat belt chime				
Expansion valve Field coil Function control motor Idler pulley Pipes & hoses Recirculation control motor Thermal protector Thermostatic switch Wire harness, diodes HEATING Heater control Heater core Pipes & hoses Water valve cable Wire harness, diodes DOOR & BODY Antenna mast or XM antenna mast Door latch Door lock cylinders External trim, body seals, wheel rims & studs, glass, paint, interior trim, upholstery & seat construction. Surface corrosion of body panels (unlimited distance) Hinges Mechanical moonroof components Power door lock actuator Release / control cables for seats, trunk or hatch release, hood & fuel filler door Seat belt chime				
Field coil Function control motor Idler pulley Pipes & hoses Recirculation control motor Thermal protector Thermostatic switch Wire harness, diodes HEATING Heater control Heater core Pipes & hoses Water valve cable Wire harness, diodes DOOR & BODY Antenna mast or XM antenna mast Door latch Door lock cylinders External trim, body seals, wheel rims & studs, glass, paint, interior trim, upholstery & seat construction. Surface corrosion of body panels (unlimited distance) Hinges Mechanical moonroof components Power door lock actuator Release / control cables for seats, trunk or hatch release, hood & fuel filler door Seat belt chime				
Function control motor Idler pulley Pipes & hoses Recirculation control motor Thermal protector Thermostatic switch Wire harness, diodes HEATING Heater control Heater core Pipes & hoses Water valve cable Wire harness, diodes DOOR & BODY Antenna mast or XM antenna mast Door latch Door lock cylinders External trim, body seals, wheel rims & studs, glass, paint, interior trim, upholstery & seat construction. Surface corrosion of body panels (unlimited distance) Hinges Mechanical moonroof components Power door lock actuator Release / control cables for seats, trunk or hatch release, hood & fuel filler door Seat belt chime				
Idler pulley Pipes & hoses Recirculation control motor Thermal protector Thermostatic switch Wire harness, diodes HEATING Heater control Heater core Pipes & hoses Water valve cable Wire harness, diodes DOOR & BODY Antenna mast or XM antenna mast Door lack cylinders External trim, body seals, wheel rims & studs, glass, paint, interior trim, upholstery & seat construction. Surface corrosion of body panels (unlimited distance) Hinges Mechanical moonroof components Power door lock actuator Release / control cables for seats, trunk or hatch release, hood & fuel filler door Seat belt chime				
Pipes & hoses Recirculation control motor Thermal protector Thermostatic switch Wire harness, diodes HEATING Heater control Heater core Pipes & hoses Water valve cable Wire harness, diodes DOOR & BODY Antenna mast or XM antenna mast Door latch Door lock cylinders External trim, body seals, wheel rims & studs, glass, paint, interior trim, upholstery & seat construction. Surface corrosion of body panels (unlimited distance) Hinges Mechanical moonroof components Power door lock actuator Release / control cables for seats, trunk or hatch release, hood & fuel filler door Seat belt chime				
Recirculation control motor Thermal protector Thermostatic switch Wire harness, diodes HEATING Heater control Heater core Pipes & hoses Water valve cable Wire harness, diodes DOOR & BODY Antenna mast or XM antenna mast Door latch Door lock cylinders External trim, body seals, wheel rims & studs, glass, paint, interior trim, upholstery & seat construction. Surface corrosion of body panels (unlimited distance) Hinges Mechanical moonroof components Power door lock actuator Release / control cables for seats, trunk or hatch release, hood & fuel filler door Seat belt chime				
Thermal protector Thermostatic switch Wire harness, diodes HEATING Heater control Heater core Pipes & hoses Water valve cable Wire harness, diodes DOOR & BODY Antenna mast or XM antenna mast Door latch Door lock cylinders External trim, body seals, wheel rims & studs, glass, paint, interior trim, upholstery & seat construction. Surface corrosion of body panels (unlimited distance) Hinges Mechanical moonroof components Power door lock actuator Release / control cables for seats, trunk or hatch release, hood & fuel filler door Seat belt chime				
Thermostatic switch Wire harness, diodes HEATING Heater control Heater core Pipes & hoses Water valve cable Wire harness, diodes DOOR & BODY Antenna mast or XM antenna mast Door latch Door lock cylinders External trim, body seals, wheel rims & studs, glass, paint, interior trim, upholstery & seat construction. Surface corrosion of body panels (unlimited distance) Hinges Mechanical moonroof components Power door lock actuator Release / control cables for seats, trunk or hatch release, hood & fuel filler door Seat belt chime				
Wire harness, diodes HEATING Heater control Heater core Pipes & hoses Water valve cable Wire harness, diodes DOOR & BODY Antenna mast or XM antenna mast Door latch Door lock cylinders External trim, body seals, wheel rims & studs, glass, paint, interior trim, upholstery & seat construction. Surface corrosion of body panels (unlimited distance) Hinges Mechanical moonroof components Power door lock actuator Release / control cables for seats, trunk or hatch release, hood & fuel filler door Seat belt chime				
HEATING Heater control Heater core Pipes & hoses Water valve cable Wire harness, diodes DOOR & BODY Antenna mast or XM antenna mast Door latch Door lock cylinders External trim, body seals, wheel rims & studs, glass, paint, interior trim, upholstery & seat construction. Surface corrosion of body panels (unlimited distance) Hinges Mechanical moonroof components Power door lock actuator Release / control cables for seats, trunk or hatch release, hood & fuel filler door Seat belt chime				
Heater control Heater core Pipes & hoses Water valve cable Wire harness, diodes DOOR & BODY Antenna mast or XM antenna mast Door latch Door lock cylinders External trim, body seals, wheel rims & studs, glass, paint, interior trim, upholstery & seat construction. Surface corrosion of body panels (unlimited distance) Hinges Mechanical moonroof components Power door lock actuator Release / control cables for seats, trunk or hatch release, hood & fuel filler door Seat belt chime				
Heater core Pipes & hoses Water valve cable Wire harness, diodes DOOR & BODY Antenna mast or XM antenna mast Door latch Door lock cylinders External trim, body seals, wheel rims & studs, glass, paint, interior trim, upholstery & seat construction. Surface corrosion of body panels (unlimited distance) Hinges Mechanical moonroof components Power door lock actuator Release / control cables for seats, trunk or hatch release, hood & fuel filler door Seat belt chime				
Pipes & hoses Water valve cable Wire harness, diodes DOOR & BODY Antenna mast or XM antenna mast Door latch Door lock cylinders External trim, body seals, wheel rims & studs, glass, paint, interior trim, upholstery & seat construction. Surface corrosion of body panels (unlimited distance) Hinges Mechanical moonroof components Power door lock actuator Release / control cables for seats, trunk or hatch release, hood & fuel filler door Seat belt chime				
Water valve cable Wire harness, diodes DOOR & BODY Antenna mast or XM antenna mast Door latch Door lock cylinders External trim, body seals, wheel rims & studs, glass, paint, interior trim, upholstery & seat construction. Surface corrosion of body panels (unlimited distance) Hinges Mechanical moonroof components Power door lock actuator Release / control cables for seats, trunk or hatch release, hood & fuel filler door Seat belt chime				
Wire harness, diodes DOOR & BODY Antenna mast or XM antenna mast Door latch Door lock cylinders External trim, body seals, wheel rims & studs, glass, paint, interior trim, upholstery & seat construction. Surface corrosion of body panels (unlimited distance) Hinges Mechanical moonroof components Power door lock actuator Release / control cables for seats, trunk or hatch release, hood & fuel filler door Seat belt chime				
DOOR & BODY Antenna mast or XM antenna mast Door latch Door lock cylinders External trim, body seals, wheel rims & studs, glass, paint, interior trim, upholstery & seat construction. Surface corrosion of body panels (unlimited distance) Hinges Mechanical moonroof components Power door lock actuator Release / control cables for seats, trunk or hatch release, hood & fuel filler door Seat belt chime				
Antenna mast or XM antenna mast Door latch Door lock cylinders External trim, body seals, wheel rims & studs, glass, paint, interior trim, upholstery & seat construction. Surface corrosion of body panels (unlimited distance) Hinges Mechanical moonroof components Power door lock actuator Release / control cables for seats, trunk or hatch release, hood & fuel filler door Seat belt chime	Wire harness, diodes			
Door latch Door lock cylinders External trim, body seals, wheel rims & studs, glass, paint, interior trim, upholstery & seat construction. Surface corrosion of body panels (unlimited distance) Hinges Mechanical moonroof components Power door lock actuator Release / control cables for seats, trunk or hatch release, hood & fuel filler door Seat belt chime	DOOR & BODY			
Door lock cylinders External trim, body seals, wheel rims & studs, glass, paint, interior trim, upholstery & seat construction. Surface corrosion of body panels (unlimited distance) Hinges Mechanical moonroof components Power door lock actuator Release / control cables for seats, trunk or hatch release, hood & fuel filler door Seat belt chime	Antenna mast or XM antenna mast			
External trim, body seals, wheel rims & studs, glass, paint, interior trim, upholstery & seat construction. Surface corrosion of body panels (unlimited distance) Hinges Mechanical moonroof components Power door lock actuator Release / control cables for seats, trunk or hatch release, hood & fuel filler door Seat belt chime	Door latch			
studs, glass, paint, interior trim, upholstery & seat construction. Surface corrosion of body panels (unlimited distance) Hinges Mechanical moonroof components Power door lock actuator Release / control cables for seats, trunk or hatch release, hood & fuel filler door Seat belt chime	Door lock cylinders			
& seat construction. Surface corrosion of body panels (unlimited distance) Hinges Mechanical moonroof components Power door lock actuator Release / control cables for seats, trunk or hatch release, hood & fuel filler door Seat belt chime	External trim, body seals, wheel rims &			
body panels (unlimited distance) Hinges Mechanical moonroof components Power door lock actuator Release / control cables for seats, trunk or hatch release, hood & fuel filler door Seat belt chime	studs, glass, paint, interior trim, upholstery			
Hinges Mechanical moonroof components Power door lock actuator Release / control cables for seats, trunk or hatch release, hood & fuel filler door Seat belt chime				
Mechanical moonroof components Power door lock actuator Release / control cables for seats, trunk or hatch release, hood & fuel filler door Seat belt chime	body panels (unlimited distance)			
Power door lock actuator Release / control cables for seats, trunk or hatch release, hood & fuel filler door Seat belt chime	Hinges			
Release / control cables for seats, trunk or hatch release, hood & fuel filler door Seat belt chime	Mechanical moonroof components			
hatch release, hood & fuel filler door Seat belt chime	Power door lock actuator			
Seat belt chime				
Sideview power mirror actuators				
Sideview power mirror defrosters				
Window regulators				
SECURITY SYSTEM				
Immobilizer				
Harness				
Security transmitter	Security transmitter			

	INCLUDED WIT	H YOUR VEHICLE	ACURA PLUS
ELECTRICAL	FACTORY WARRANTY 4 YRS / 80,000 KM	MAJOR COMPONENT 5 YRS / 100,000 KM	COMPREHENS PROTECTION PLAN
Active front lighting system			
Active Noise Cancellation (ANC)			
All bulletin related software updates			
All cameras			
Acura Satellite-Linked Navigation System™			
Acurawatch™ suite of driver assistive			
technologies			
All genuine Acura electrical accessories			
Audio system, LCD displays, DVD, DVD-A, DVD-ROM, MP3, WMA, tuner, SiriusXM® Canada			
Satellite Radio, auxiliary input jacks, clock			
Automatic day/night rearview mirror			
Battery Management System (BMS)			
Bulbs – 1 yr/20,000 km			
Cooling fan motor(s)			
Fuse box – dash & under hood			
HandsFreeLink™ and HomeLink®			
Hard Disk Drive (HDD)			
Ignition switch, headlight switch, push-button starter switch, wiper switch			
Illuminated steering wheel-mounted controls			
Keyless entry system			
Main & sub wiring harness			
Meter & displays			
Microphones			
Power rear-seat headrest retractor			
Power rear sunshade			
Resistors / Transistors			
Solenoids & relays except those related			
to emissions Thermo pressure switches			
Tire Pressure Monitor System (TPMS)			
Washer level warning sensor			
Washer pump – front & rear			
Windshield washer reservoir front & rear,			
headlight nozzles			
Wiper linkage			
SENSORS			
All electrical sensors			
CONTROL UNITS			
All control units			
SEALS AND GASKETS			
All seals & gaskets on covered parts			
MANUALLY OPERATED SWITCHES All manually operated switches			
MOTORS			
All electrical motors			
FLUIDS AND OILS			
On all covered repairs			

FOR HYBRID	INCLUDED WIT	ACURA PLUS	
VEHICLES ONLY	FACTORY	MAJOR	
HYBRID/ELECTRIC SYSTEM	WARRANTY 4 YRS / 80,000 KM	COMPONENTS 8 YRS / 160,000 KM	PROTECTION PLAN
Battery assembly			
Battery condition monitor module			
Battery current sensor			
Battery module and temperature sensor			
Battery module fuse			
Battery module service connector			
Brake pedal position sensor			
Brake pedal reaction force generation device			
Busbars			
Drive motor stators and rotors (including all internal components and position sensors)			
Bypass contactor and resistor			
Differential brake pressure control solenoid valve	•		
Differential electronic fluid pump			
Differential fluid pressure sensor			
Differential fluid temperature sensor	•		
DC-DC converter			
Electronic differential oil pump			
Electric motor control module coolant pump assembly			
High speed motor power inverter module fan control relay			
High voltage DC-DC converter cable			
High voltage motor power inverter module cable			
High voltage contactor			
Hybrid module fan assembly (including air ducts)			
Hybrid system relays Motor and gear powered brake cylinder/			
actuator			
Motor commutation sensor			
Motor control module			
Motor control module coolant expansion tank assembly			
Motor control module coolant radiator assembly			
Motor control module relay			
Motor current sensor			
Motor drive module capacitor			
Motor power cable			
Motor power inverter module			
Motor power inverter module/battery			
module fan assembly (including air ducts)			
Motor rotor			
Motor rotor position sensor			
Traction motor rotor position sensor			
Voltage converter module			
Water pump assembly (hybrid)			

^{• = (}MDX Sport Hybrid SH-AWD)

131056 Acura_Comp_E [NS2542].indd 4 2019-08-19 11:11 AM